



**Holder for GPS antenna, detachable**  
(for details see 3D Terrestrial Scanner system configurations).

**High Resolution Digital Camera with accessories**  
(for details see camera system configurations).

**High-Precision Camera Mount, detachable**

**Lens Adapter & Protection Tube**

**Nikon:**

High-Precision Nikon Camera Mount, detachable

- for Nikon D70s, D100, D200, or D300(s)  
[Part-No. 02RA09-00-008-01](#)
- for Nikon D90  
[Part-No. 02RA09-00-008-03](#)
- for Nikon D700  
[Part-No. 02RA09-00-008-02](#)

Lens adapter & protection tube

- for Nikon Lens AF D 20/2.8 NIKKOR  
[Part-No. 02RA02-04-044-00](#)
- for Nikon Lens AF D 28/2.8 NIKKOR or  
for Nikon Lens AF 35/2D NIKKOR  
[Part-No. 02RA02-04-052-00](#)
- for Nikon Lens AF D 50/1.8 NIKKOR  
[Part-No. 02RA02-04-053-00](#)
- for Nikon Lens AF D 85/1.8 NIKKOR  
[Part-No. 02RA02-04-035-00](#)
- for Nikon Lens AF D 180/2.8 IF ED  
[Part-No. 02RA02-04-036-00](#)

**Canon:**

High-Precision Canon Camera Mount, detachable

- for Canon EOS 1Ds Mark II [Part-No. 02RA09-00-010-00](#)
- for Canon EOS 20D [Part-No. 02RA09-00-012-00](#)
- for Canon EOS 350D, 400D, 450D [Part-No. 02RA09-00-012-02](#)

Lens adapter & protection tube

- for Canon Lens EF 20 mm 1/2.8 USM [Part-No. 02RA02-04-042-00](#)
- for Canon Lens EF 28 mm 1/1.8 USM [Part-No. 02RA02-04-041-00](#)
- for Canon Lens EF 35 mm 1/2.0 [Part-No. 02RA02-04-034-00](#)
- for Canon Lens EF 50 mm 1/1.4 USM [Part-No. 02RA02-04-050-00](#)
- for Canon Lens EF 85 mm 1/1.8 USM [Part-No. 02RA02-04-042-00](#)
- for Canon Lens EF 200 mm 1/2.8 L II USM [Part-No. 02RA02-04-049-00](#)